

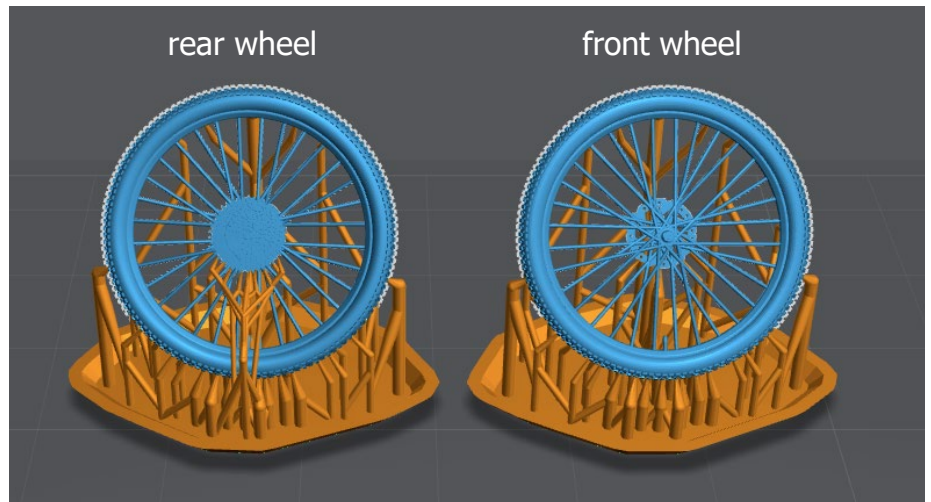
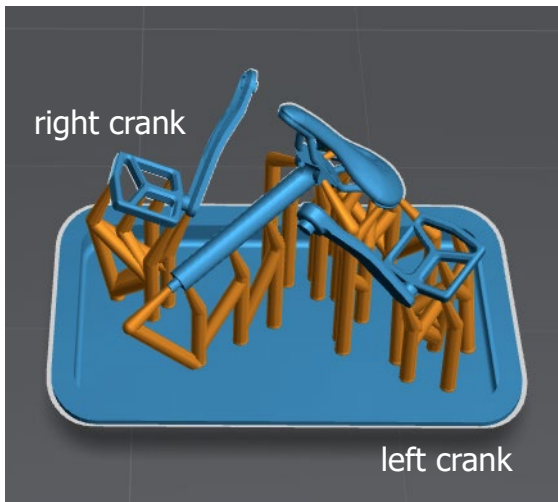


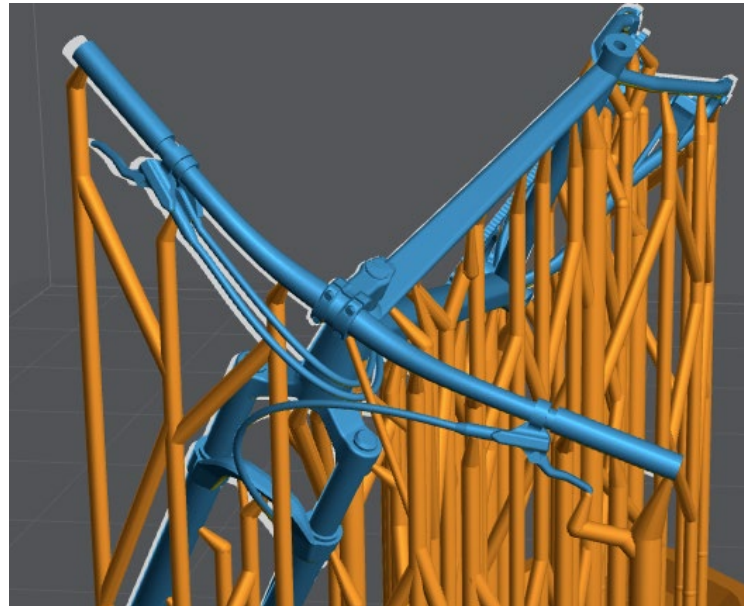

29" Mountain bike (modern)

1/35 cat.n. M35002

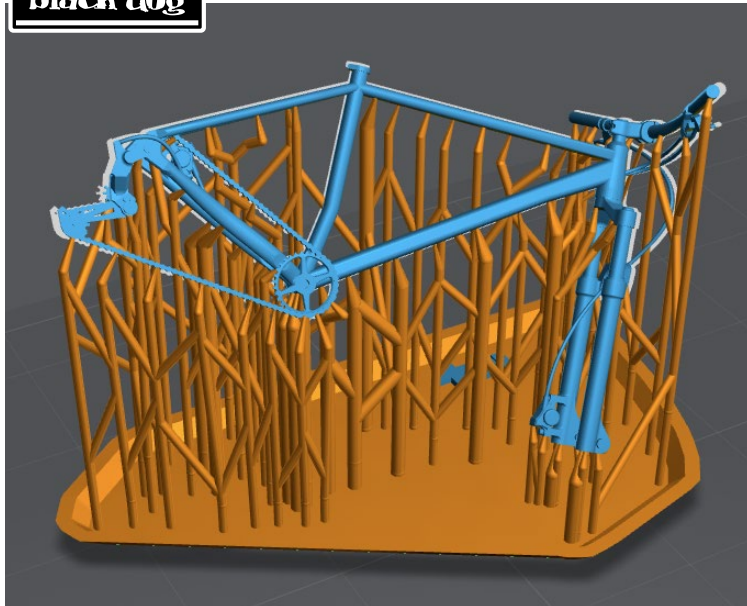

Remove supports (orange) carefully with side plier.
Use cyanoacrylate glue. Parts can be grinded and filled by putty as on classic resin.

Align chain on
casette to rest
of the chain.

